



SeeZero Display

Quick start guide

SeeZero Display

Quick start guide

Energy usage screen

- ① Move between current and previous periods
- ② Choose period to view: Now, today, this week and this month
- ③ Colour changes based on energy usage
- ④ Hourly cost based on your tariff
- ⑤ Current usage in kW
- ⑥ Total cost based on your tariff
- ⑦ View electricity or gas usage
- ⑧ Menu



SeeZero Display

Quick start guide

Click to find out more about each menu item

Energy usage

< Now >

£ 1.16 /hr

Currently using

Usage

3.4kW

So far today

£2.37

⚡ 🔥 ☰

Prepay*

< Now >

£ 0.24 /hr

Currently using

Balance

£18.37

About 5 days left

⚡ 🔥 ☰

Inbox

< Inbox >

Title of email... 12/11/24

Title of email... 12/11/24

Title of email... 12/11/24

Title of email... 12/11/24

Title of email... 12/11/24

←

Help

Help

For help with using your SeeZero visit
seezero.com/support
or scan the QR code below:

QR code

☰

Settings

Settings

Wi-Fi network

Display & brightness

Budget

Low credit alert

Units

< >

☰

System info

System info

System health

Tariffs

Meter balance

Meter info

Supplier info

< >

☰




* if applicable


Energy usage

- ① Colour changes based on energy usage
 - Green Low usage
 - Amber Medium usage
 - Red High usage
 - Blue Blue Exporting (appears on electricity screen for users with solar panels)
- ② Move between current and previous periods
- ③ Choose period to view: Now, today, this week and this month
- ④ Hourly cost based on your tariff
- ⑤ Current usage in kW
- ⑥ Total cost based on your tariff
- ⑦ Switch between electricity or gas usage
- ⑧ Menu

Electricity usage

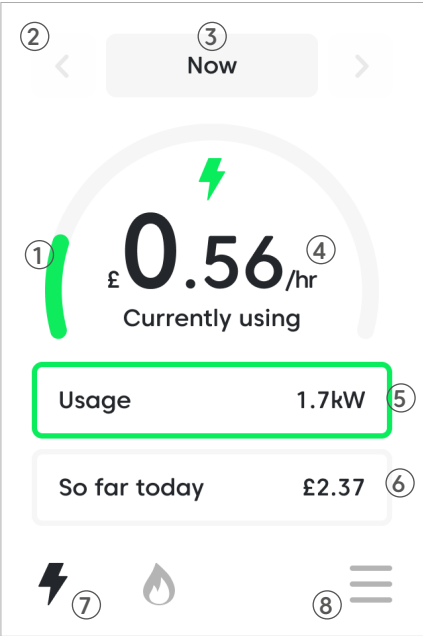

Gas usage

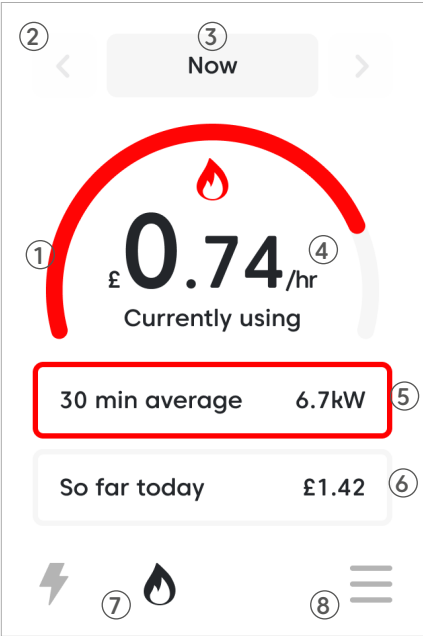

Examples of energy usage

Colour changes based on total energy used in the home. The list below categorises energy usage of items around the home

Low energy items

- Fridge/Freezer
- Computer
- TV
- WiFi router
- Items on standby


Medium energy items

- Microwave
- Toaster
- Vacuum cleaner


High energy items

- Electric shower
- Tumble dryer
- Washing machine
- Oven
- Hob


Low

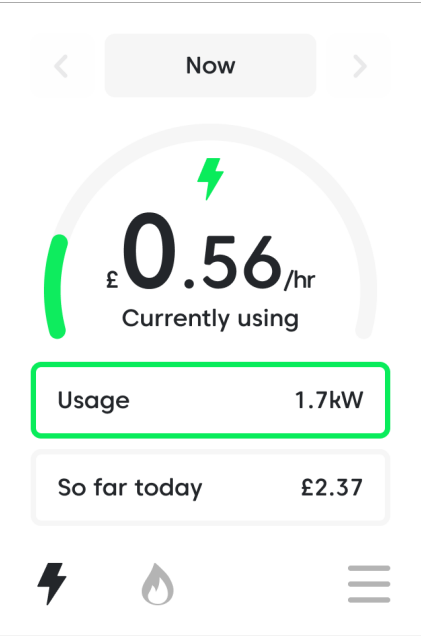

Medium

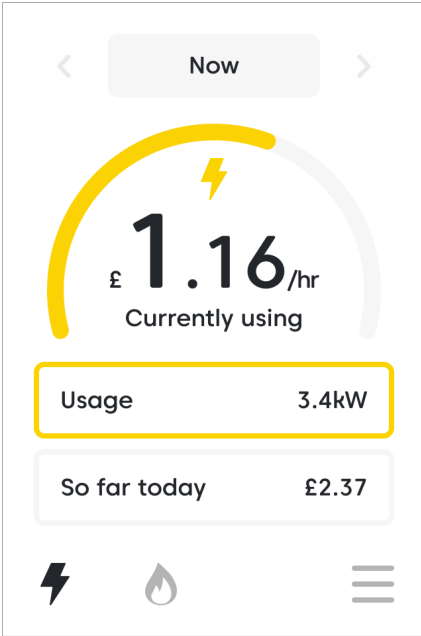

High

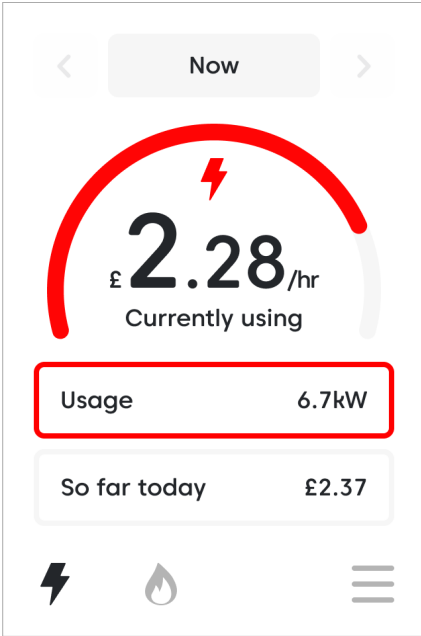

SeeZero Display

Quick start guide

Menu



Prepay

- ① Colour changes based on energy usage

● Green
Low usage

● Amber
Medium usage

● Red
High usage

● Blue

Blue Exporting
(appears on
electricity screen
for users with solar
panels)

- ② Move between current and previous periods

- ③ Choose period to view: Now, today, this week and this month

- ④ Hourly cost based on your tariff

- ⑤ Shows balance remaining including emergency credit (EMC)

- ⑥ Estimated number of days credit will last

● Green
Over 3 days

● Amber
1-2 days


● Red
Less than
1 day

- ⑦ Switch between electricity or gas usage


- ⑧ Menu



Electricity usage

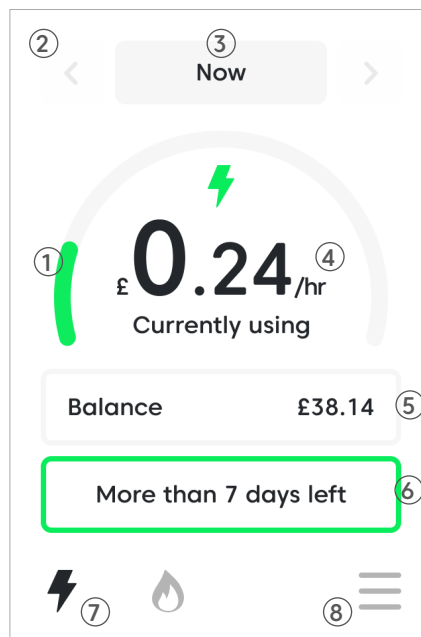


Gas usage

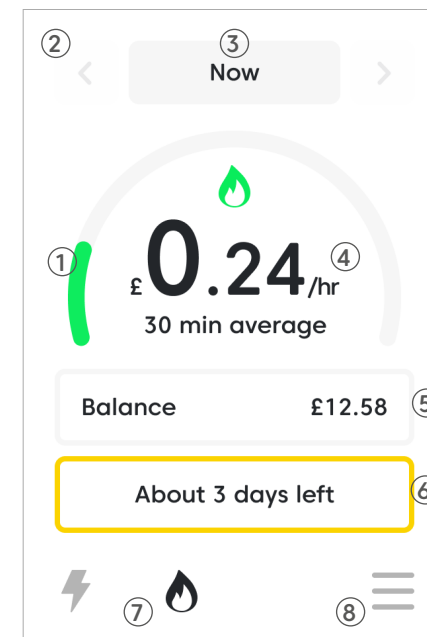


Inbox

- ① Move between messages
- ② Select message (Purple is unread)
- ③ Back
- ④ Confirm or Yes/no button (when pressed you're able to then delete the message)
- ⑤ Delete message
- ⑥ Read new message
- ⑦ Close new message


Inbox

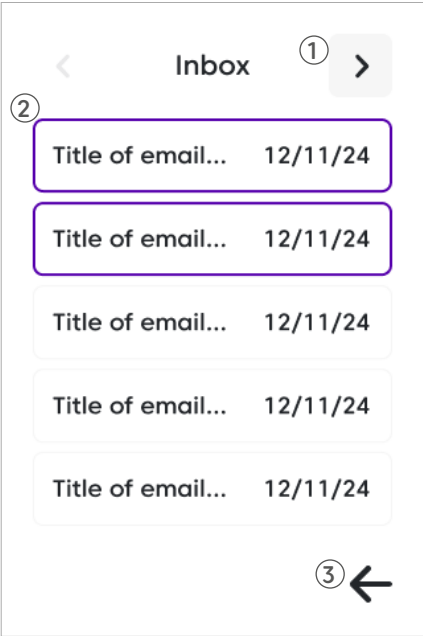

Message view


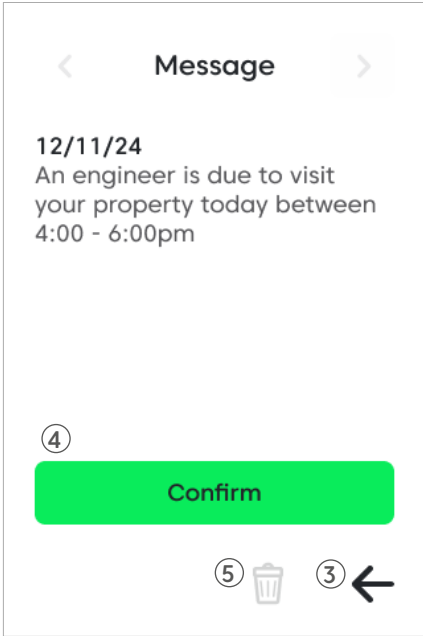


New message pop-up

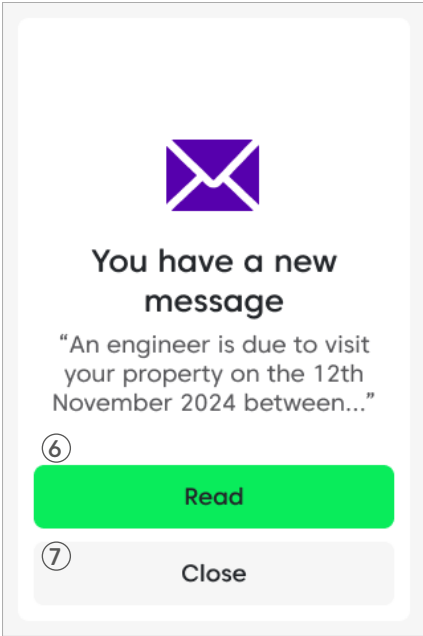

Settings

- ① Connect to home Wi-Fi
- ② Display brightness and sleep settings
- ③ Set your energy budgets
- ④ Set an alert level for low credit (prepay only)
- ⑤ Set usage levels for electricity
- ⑥ Usage level settings
- ⑦ Engineer use only. Pin code required
- ⑧ Reset settings, clear data or both

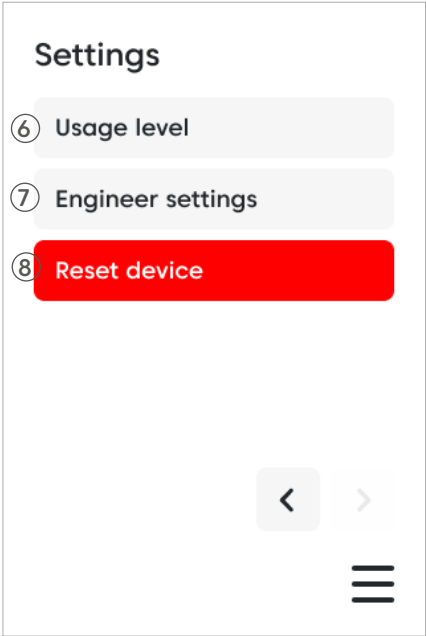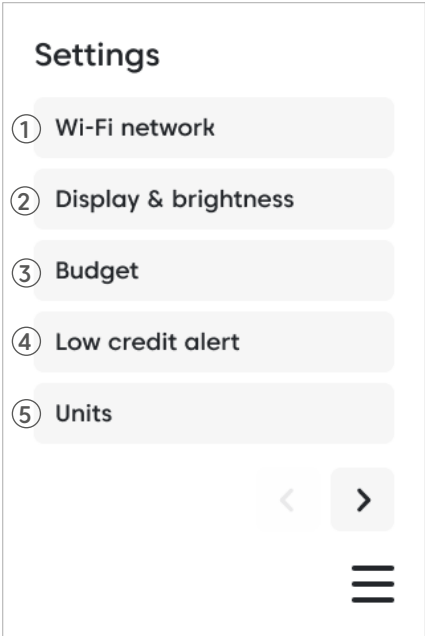

System info

- ① Check system for any issues
- ② Your tariff details
- ③ Check meter balance (prepay only)
- ④ Check smart meter information
- ⑤ Check energy supplier information
- ⑥ Check display information
- ⑦ Link and QR code to privacy policy
- ⑧ PSTI (Product Security and Telecommunications Infrastructure) information

